
# **Panasonic**

## **Operating Instructions**

Included Installation Instructions

#### **Corner Mount Bracket**

Model No. WV-Q183 / WV-Q189 (Light Gray)

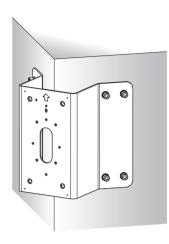

Before attempting to connect or install this product, please read these instructions carefully and save this manual for future use.

The model number is abbreviated in some descriptions in this manual.

#### For U.S. and Canada:

Panasonic i-PRO Sensing Solutions Corporation of America 800 Gessner Rd, Suite 700 Houston, TX 77024 https://www.security.us.panasonic.com/

#### Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3 Canada Authorised Representative in EU: 1-877-495-0580 https://www.panasonic.com/ca/

Panasonic Corporation

For Europe and other countries:

http://www.panasonic.com

Panasonic i-PRO Sensing Solutions Co., Ltd. Fukuoka, Japan

Panasonic Testing Centre Panasonic Marketing Europe GmbH Winsbergring 15, 22525 Hamburg, Germany

© Panasonic i-PRO Sensing Solutions Co., Ltd. 2019

sL1217-1109 PGQX2197YA Printed in China


## **Preface**

### **Features**

WV-Q183/WV-Q189 (corner mount bracket) is designed to be used to install a camera or mount bracket for camera to an external corner of building.

• WV-Q183 is different with WV-Q189 in color, and same in structure. This manual takes WV-Q189 as an example for explanation.

#### Parts and functions

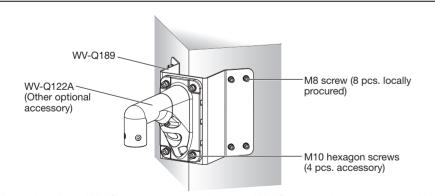

(In this illustration, fixing WV-Q122A to a corner by using WV-Q189 is taken as an example.

# **Specifications**

Ambient operating temperature:	–50 °C to +60 °C {–58 °F to 140 °F}
Dimensions:	230 mm (L) $\times$ 246 mm (W) $\times$ 155 mm (H) {9-1/16 inches (L) $\times$ 9-11/16 inches (H) $\times$ 6-3/32 inches (H)}
Mass:	Approx. 1.3 kg {2.87 lbs}
īnish:	Aluminum die cast Light gray <wv-q183> Fine silver <wv-q189></wv-q189></wv-q183>

## **Precautions**

#### Refer installation work to the dealer.

Installation work requires technique and experiences. Failure to observe this may cause fire, electric shock, injury, or damage to the product.

Be sure to consult the dealer.

#### The exclusively designed mount bracket shall be used.

Failure to observe this may cause a drop resulting in injury or accidents. Use the exclusively designed mount bracket for installation.

#### Do not install this product in locations subject to vibration.

Loosening of mounting screws or bolts may cause a fall of the product resulting in injury or accidents.

#### Install this product in a location high enough to avoid people and objects from bumping the product.

Failure to observe this may cause injury.

#### The measures of protection against a fall of this product shall be taken.

Failure to observe this may cause a drop resulting in injury.

If there is specified safety wire, please make sure to install it.

#### The screws and bolts must be tightened to the specified torque.

Failure to observe this may cause a drop resulting in injury or accidents.

#### Select an installation area that can support the total weight.

Selecting an inappropriate installation surface may cause this product to fall down or topple over, resulting in injury or accidents.

Installation work shall be started after sufficient reinforcement.

#### Periodic inspections shall be conducted.

Rust on the metal parts or screws may cause a fall of the product resulting in injury or accidents. Consult the dealer for the inspections.

#### Do not hang down from this product or use this product as a pedestal.

Failure to observe this may cause injury or accidents.

#### Do not use this bracket except with specified cameras or other brackets.

Failure to observe this may cause a drop resulting in injury or accidents.

#### Avoid installing this bracket in the locations where salt damage occurs or corrosive gas is produced.

Otherwise, the mounting portions will deteriorate and accidents such as a fall of this product may occur.

#### Do not install this product on a place that is greatly influenced by wind.

Installation on a place where the wind speed is 60 m/s {approx. 134 mph} or more may cause a fall of the product resulting in injury or accidents.

### Do not attempt to disassemble or modify this product.

Failure to observe this may cause a fall of the product resulting in injury or accidents. Consult the dealer for the repair or inspections.

#### Do not rub the edges of metal parts with your hand.

Strong rubbing may cause injury.

#### The measures of protection against snowfall shall be taken.

Weight of snow may cause a fall of the product resulting in injury or accidents. Protect the product against snowfall by installing under eaves.

## **Precautions for installation**

Panasonic assumes no responsibility for injuries or property damage resulting from failures arising out of improper installation or operation inconsistent with this documentation.

In order to prevent injury, the product must be securely mounted to the wall (corner) according to Operating Instructions.

#### Installation area for this product

- Please consider the influence of vibration and wind at the installation site and mount the bracket onto the wall with appropriate strength.
- Installable corner: Corner part of a vertical and right-angle wall
- Do not mount the product on a plaster board or a wooden section because they are too weak. If the product is unavoidably mounted on such a section, the section shall be sufficiently reinforced.
- After the bracket is mounted, please verify the following content once a year. In the event of abnormality, please inform the dealer.
- Do not allow any slanting, distortion or offset in installation.
- Bracket should not have any serious rust or damage.
- Please refer to Panasonic's support website (https://security.panasonic.com/support/info/) for installation information of the bracket

#### About the installation methods

- The bracket is specifically designed for installation onto a corner of the wall.
- Prepare mounting screws (M8 8 pcs.) and anchor bolts to be mounted on a wall separately. Select screws according to the material of the location that the bracket will be mounted to.
- Minimum pull-out strength: 823 N {185 lbf} (per 1 pc.)
- After the installation is finished, please check if there are slackness or shaking of screws and raising of mount bracket.

In the event of abnormality, please tighten again.

#### Check before the installation.

Once the bracket is installed with a deformed mount bracket and/or damaged part, it could potentially fall. Before the installation, please make sure to check the appearance of the bracket.

#### Do not place this product in the following places:

- Locations where a chemical agent is used such as a swimming pool.
- Locations that have a specific environment that is subject to an inflammable atmosphere or solvents. • In areas by the sea or the seashore, regions with snow melt agent scattered and locations that produce a corrosive gas such as volcanic areas and hot springs.
- Locations where the ambient operating temperature of camera is not within the specified range.
- · Locations subject to vibrations, such as on vehicles, marine vessels, or above product lines. (This bracket is not designed for on-vehicle use.)

#### Screw tightening

- Make sure to tighten the screws (accessory) that fix camera or mount bracket onto WV-Q183/
- Do not use an impact driver. Use of an impact driver may damage the screws or cause tightening
- When a screw is tightened, make the screw at a right angle to the surface. After tightening the screws or bolts, perform checks to ensure that the tightening is sufficient enough so that there is no movement or looseness.

Make sure to remove this product if it will no longer be used.

# Installations/Connections

	Standard accessories
	VWV-Q189> Operating Instructions (this document)
	Use the following accessories as the installation requires (use of all accessories together will likely not be necessary):
;	Safety wire fixing bracket
	M10 × 30 mm {1-3/16 inches} hexagon screws
	M6 × 16 mm {5/8 inches} hexagon screws

<WV-Q183>

• One spare is provided for each type of screw.

 $M5 \times 20 \text{ mm } \{25/32 \text{ inches}\} \text{ screws}.$ 

 $M3 \times 10 \text{ mm} \{13/32 \text{ inches}\} \text{ screws.}$ 

Operating Instructions (this document).

 $M4 \times 16 \text{ mm } \{5/8 \text{ inches}\} \text{ screws...}$ 

• A Hexagon wrench (procured locally) is needed when M10 or M6 hexagon screw is used. (In this manual, hexagon socket head cap screw is described as hexagon screw.)

Install the mount bracket onto a corner


1 Place WV-Q189 to the corner to be installed, and marked the position of eight screw holes.

 $M10 \times 30 \text{ mm } \{1-3/16 \text{ inches}\}\ \text{hexagon screws} \dots$ 

2 According to the type of screw (M8, locally procured), drill eight holes at the marked posi-

#### Note:

• The corner must enough solid to support the products installed on it.

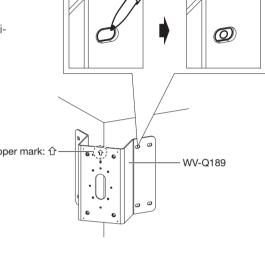

5 pcs.

4 pcs.

. 2 pcs.


.. 1 pc

.5 pcs. (1 spare)


## 3 Pass the cable to be connected with camera through the cable access hole and pull out an adequate length as needed for the

#### Note:

• Please make sure the arrow on the corner mount bracket is upward.

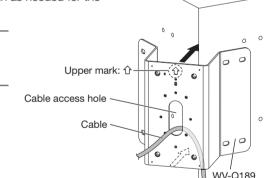

4 Use eight M8 screws (locally procured) to install WV-Q189 onto the corner. Minimum pull-out strength: 823 N {185 lbf} (per 1 pc.)

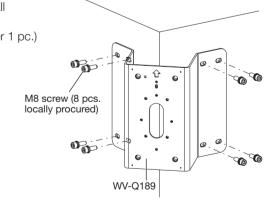

# Installations/Connections (continued)

#### Install camera or mount bracket for camera to corner mount bracket

WV-Q183/WV-Q189 (corner mount bracket) is designed to be used to install following camera or mount bracket for camera. (As of November, 2017)

For the latest information about the mountable models, refer to Panasonic support web site (https://security.panasonic.com/support/info/).

Cameras installed with WV-Q189: cameras can be directly installed with WV-Q189

#### • WV-SPW series outdoor box type network camera

WV-SPW631LT, WV-SPW631L, WV-SPW611L, WV-SPW611, WV-SPW531AL, WV-SPW532L WV-SPW311AL, WV-SPW312L

- WV-S series outdoor box type network camera
- WV-S1531LTN, WV-S1531LN, WV-S1511LN WV-SPV series outdoor box type network camera
- WV-CW series outdoor box type color CCTV camera

WV-CW324LE, WV-CW314L, WV-CW314LE, WV-CW304LE Mount bracket installed with WV-Q183/WV-Q189: install camera onto WV-Q183/WV-Q189 by using

WV-Q183 (Light gray): WV-Q185

WV-Q189 (Fine silver): WV-Q120A, WV-Q122A


#### **IMPORTANT:**


• Only 1 camera or mount bracket can be installed with WV-Q183/WV-Q189, please do not install camera or mount bracket other than the above models.

Please choose one appropriate way from the following five installation methods according to the camera to be installed. For the cables connected to camera, please refer to the man-

- (Wall mount bracket: Light gray) or WV-Q122A (Wall mount bracket: Fine silver) <WV-Q183> <WV-Q189>
- B Install network camera with round camera mount bracket <WV-Q189>
- © Install color CCTV camera with round camera mount bracket <WV-Q189>
- D Install network camera with quadrangle camera mount bracket <WV-Q189>
- (E) Install network camera with adapter box (accessory provided with camera) <WV-Q189>

#### ■ Size illustration for installing part of WV-Q183/WV-Q189

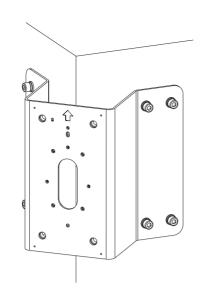


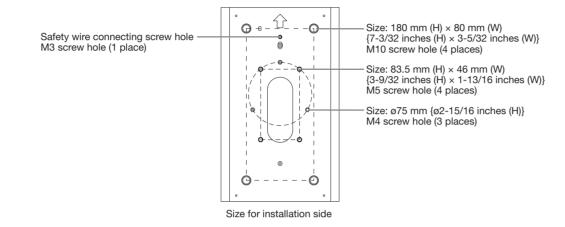

#### © Install color CCTV camera with round camera mount bracket <WV-Q189>

Applicable color CCTV camera: WV-CW324LE, WV-CW314L, WV-CW314LE, WV-CW304LE \* The installation needs three M4 screws (accessory) and one M3 screw (accessory).


- a) Before installing the camera, please rotate the camera mount bracket so that its side cable access hole is downward. For more information about the adjustment method, please refer to the manual of
- b) Align the three installation holes of camera mount bracket with the M4 screw hole (3 places) of WV-Q189, and fix the camera with three M4 screws (accessory). (Recommended tightening torque: 0.78 N·m {0.58 lbf·ft})
- c) Use one M3 screw (accessory) to fix the safety wire of the camera onto WV-Q189. (Recommended tightening torque: 0.59 N·m {0.44 lbf·ft})

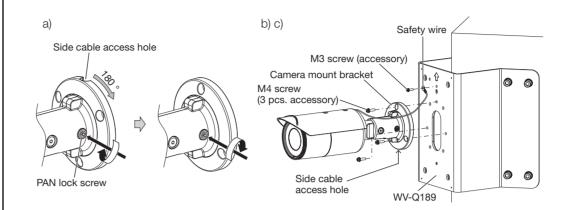

#### D Install network camera with quadrangle camera mount bracket <WV-Q189>


Applicable network camera: WV-SPW531AL, WV-SPW311AL

- \* The installation needs four M5 screws (accessory), one M6 hexagon screw (accessory), one M10 hexagon screw (accessory) and one safety wire fixing bracket (accessory)
- a) Use one M10 hexagon screw (accessory) to install the safety wire fixing bracket (accessory) on the top left corner of WV-Q189. (Recommended tightening torque: 10.8 N·m {7.97 lbf·ft})

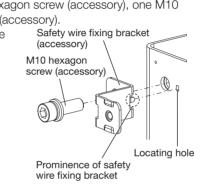


b) Align the four installation holes of camera mount bracket with the M5 screw hole (4 places) of WV-Q189, and fix the camera with four M5 screws (accessory). (Recommended tightening torque: 1.86 N·m {1.37 lbf·ft})

For the fix of camera mount bracket cover (accessory attached with the camera), please refer to the manual of camera.

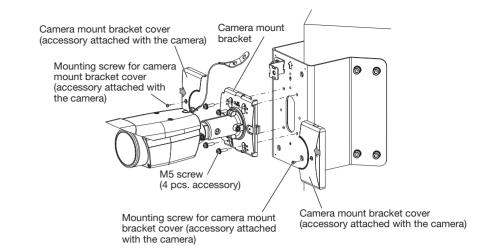

c) Use one M6 hexagon screw (accessory) to fix the safety wire of the camera onto the safety wire fixing bracket (accessory).

(Recommended tightening torque: 2.45 N·m {1.81 lbf·ft})

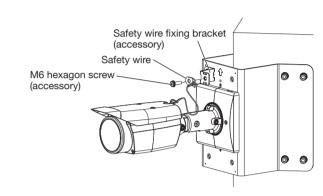


• The two network cameras applicable in this installation method can be also connected to WV-Q189 through WV-Q120A. For the detailed installation method, please refer to © (WV-Q120A and adapter box are similar in structure).

#### A Install cameras using WV-Q185 (Wall mount bracket: Light gray) or WV-Q122A (Wall mount bracket: Fine silver) <WV-Q183> <WV-Q189>

The installation needs four M10 hexagon screws (accessory).

For the camera connect and installation with WV-Q185/WV-Q122A, please refer to the Operating Instruction of WV-Q185/WV-Q122A

Align the four installation holes of WV-Q185/WV-Q122A with the M10 screw hole (4 places) of WV-Q183/ WV-Q189. and fix WV-Q185/WV-Q122A with four M10 hexagon screws (accessory). (Recommended tightening torque: 10.8 N·m {7.97 lbf·ft})

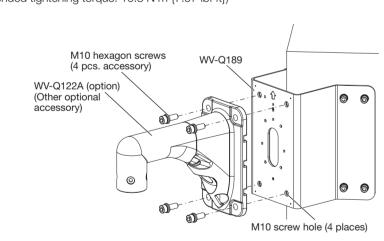

• When install WV-Q185 (Wall mount bracket: Light gray), please use WV-Q183 (Light gray). When install WV-Q122A (Wall mount bracket: Fine silver), please use WV-Q189 (Fine silver). **B** Install network camera with round camera mount bracket <WV-Q189>


Applicable network camera: WV-SPW532L, WV-SPW312L

\* The installation needs one M10 hexagon screw (accessory), three M4 screws (accessory), one M6 hexagon screw (accessory) and one safety wire fixing bracket (accessory).


(Recommended tightening torque: 10.8 N·m {7.97 lbf·ft}) b) Before installing the camera, please rotate the camera mount bracket so that its side cable access hole is downward. For

a) Use one M10 hexagon screw (accessory) to install the safety wire Safety wire fixing bracket fixing bracket (accessory) on the top left corner of WV-Q189. M10 hexagor more information about the adjustment method, please refer to the manual of camera Locating hole Prominence of safety wire fixing bracket

c) Align the three installation holes of WV-SPW312L or WV-SPW532L with the M4 screw hole (3 places) of WV-Q189, and fix WV-SPW312L or WV-SPW532L with three M4 screws (accessory). (Recommended tightening torque: 0.78 N·m {0.58 lbf·ft})

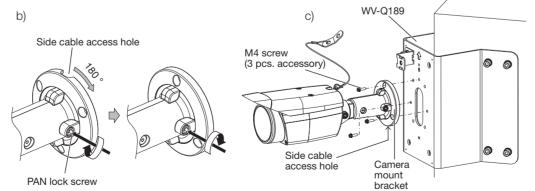

d) Use one M6 hexagon screw (accessory) to fix the safety wire of the camera onto the safety wire fixing bracket. (Recommended tightening torque: 2.45 N·m {1.81 lbf·ft})

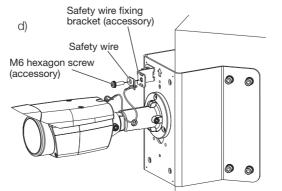


## E Install network camera with adapter box <WV-Q189>


Applicable network camera: WV-SPW631LT, WV-SPW631L, WV-SPW611L, WV-SPW611, WV-S1531LTN, WV-S1531LN, WV-S1511LN, WV-SPV781L

\* The installation needs four M5 screws (accessory), one M6 hexagon screw (accessory), one M10 hexagon screw (accessory) and one safety wire fixing bracket (accessory).


a) Use one M10 hexagon screw (accessory) to install the safety wire fixing bracket (accessory) on the top left corner of WV-Q189. (Recommended tightening torque: 10.8 N·m {7.97 lbf·ft})

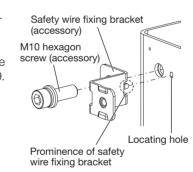

b) Align the four installation holes of adapter box with the M5 screw hole (4 places) of WV-Q189, and fix adapter box with four M5 screws (accessory). (Recommended tightening torque: 1.86 N·m {1.37 lbf·ft})

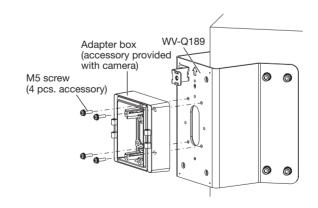


c) Mount the camera onto adapter box (accessory provided with camera) please refer to the manual

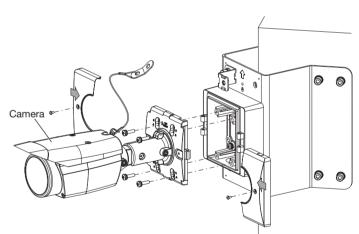

d) Use one M6 hexagon screw (accessory) to fix the safety wire of the camera onto the safety wire fixing bracket (accessory).

(Recommended tightening torque: 2.45 N·m {1.81 lbf·ft})

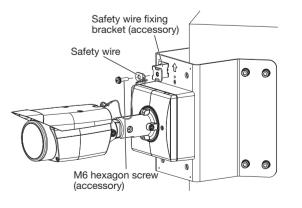

#### Note:

• These network cameras applicable in this installation method can be also directly installed onto corner mount bracket without using adapter box, for the detailed installation method, please